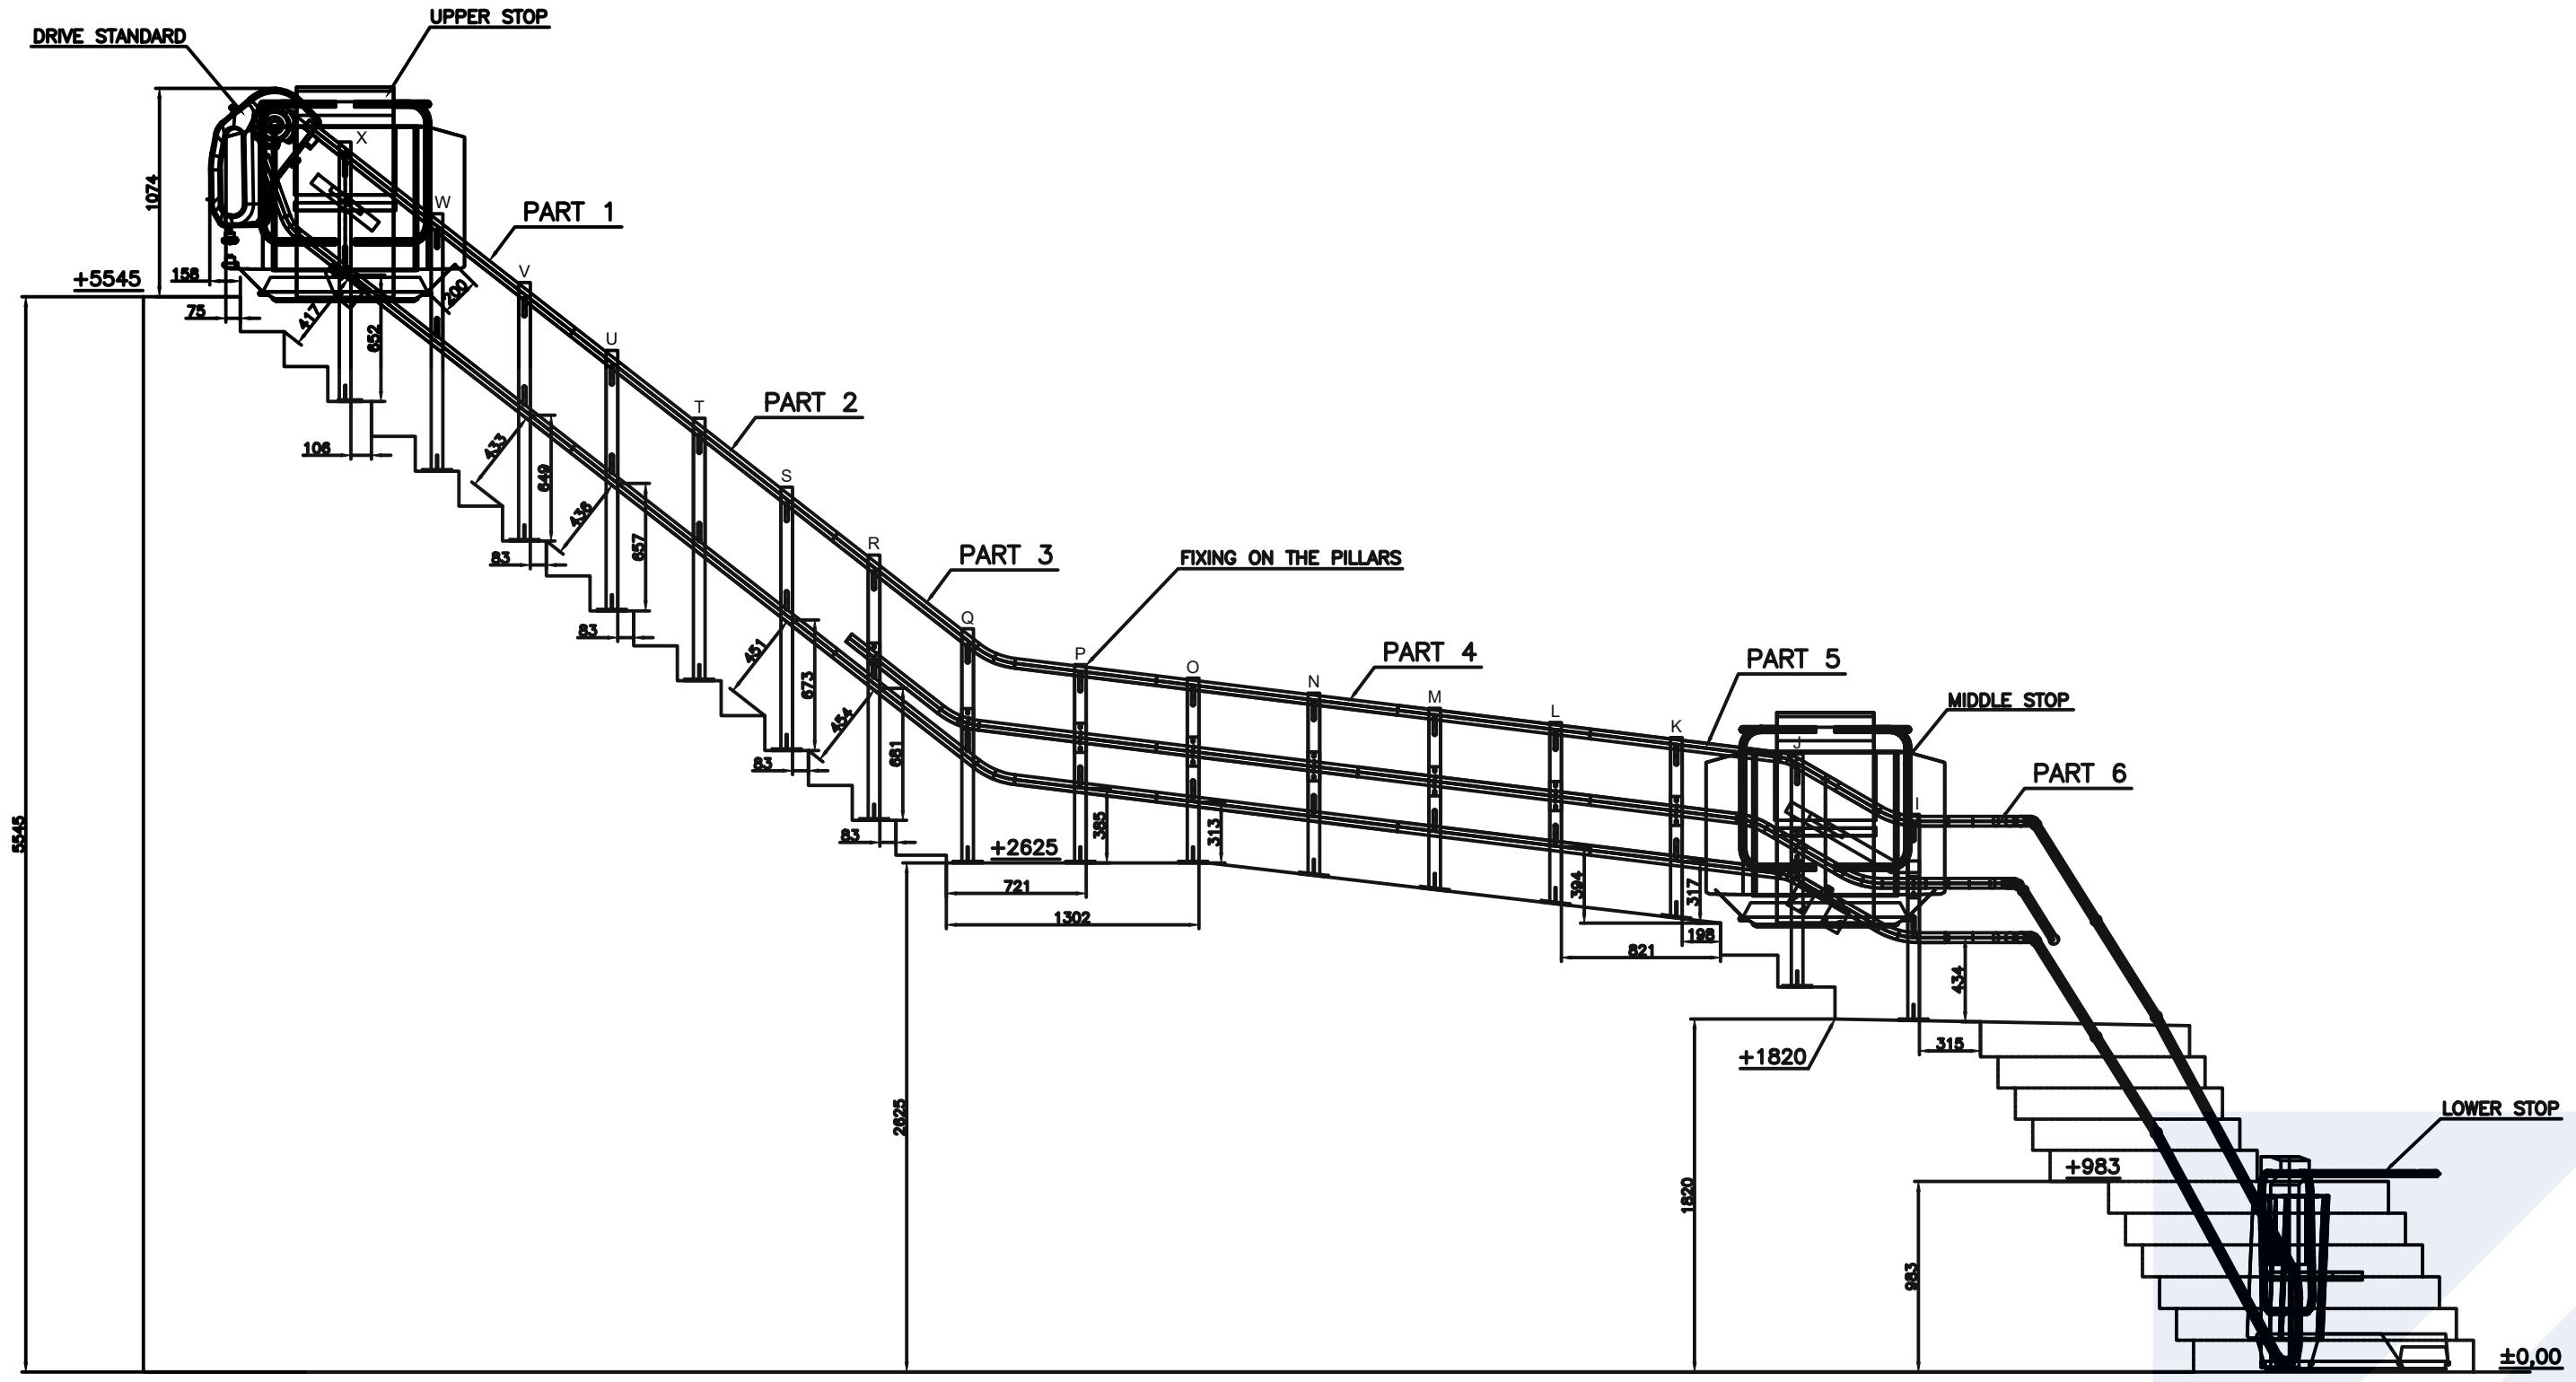
DRIVE STANDARD
UPPER STOP
PART 1
PART 2
PART 3
FIXING ON THE PILLARS
PART 4
PART 5
MIDDLE STOP
PART 6
LOWER STOP
+5545
+2625
+1820
+983
±0,00

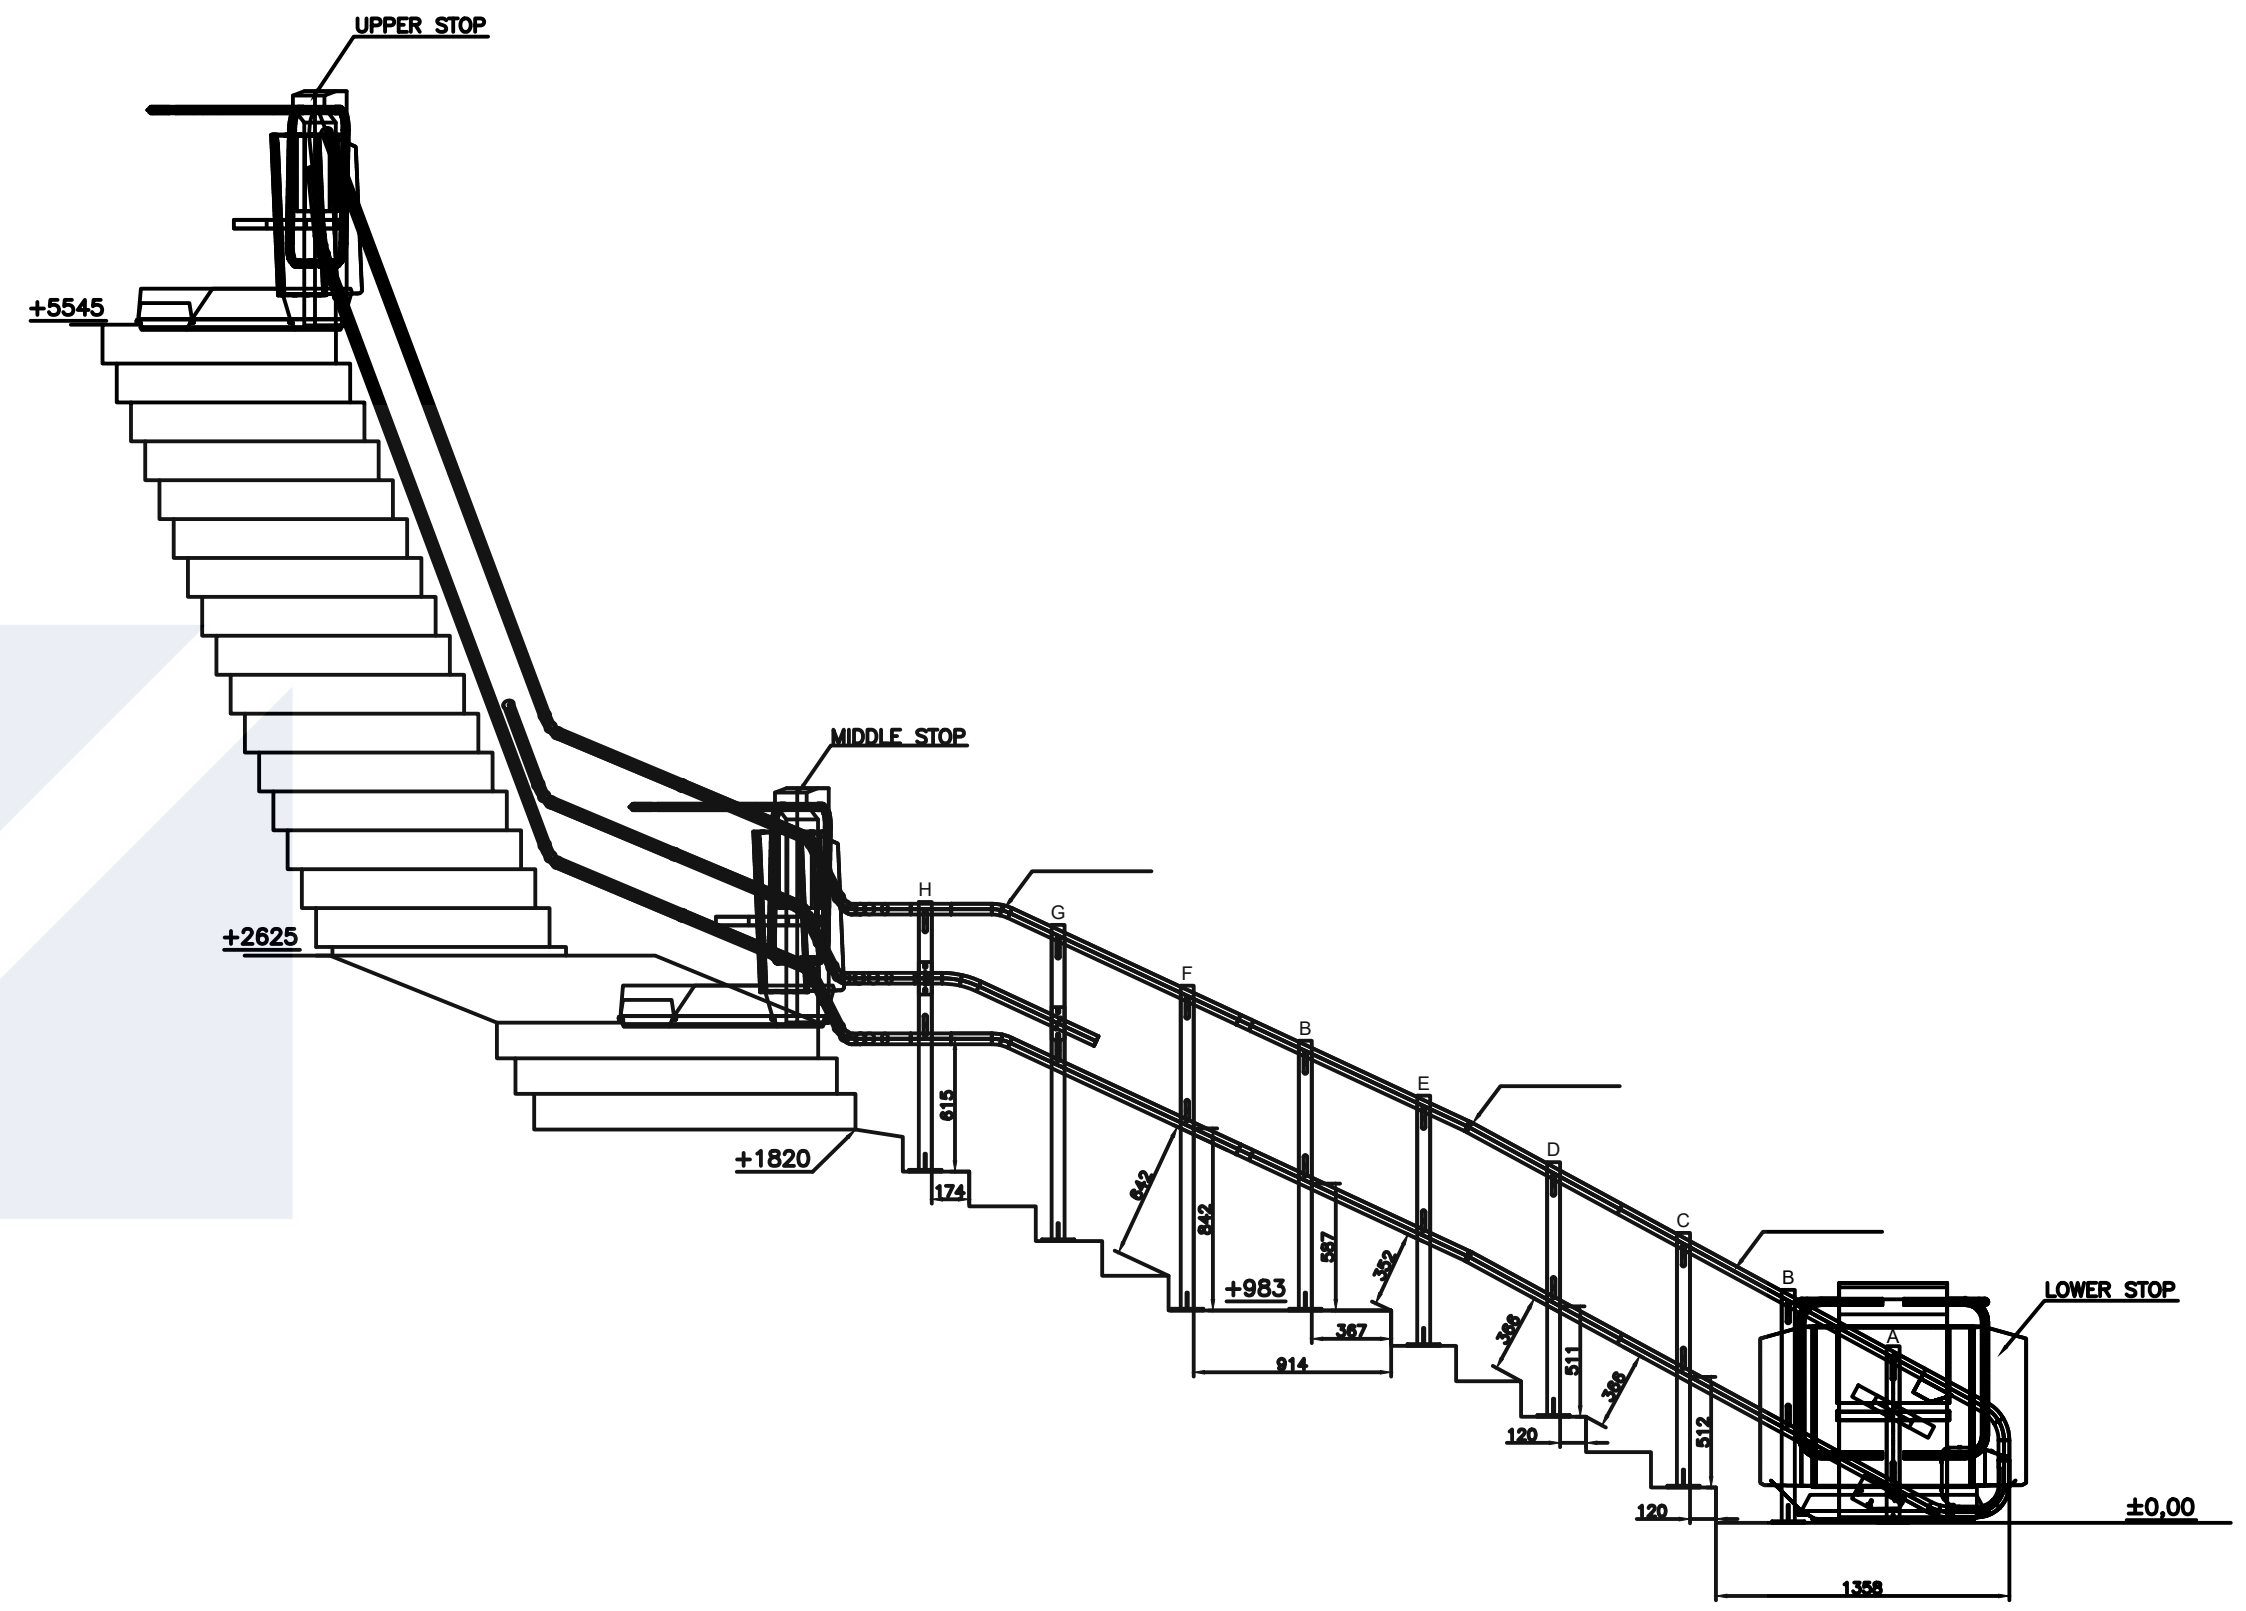
UPPER STOP
+5545
MIDDLE STOP
+2625
+1820
+983
LOWER STOP
±0,00

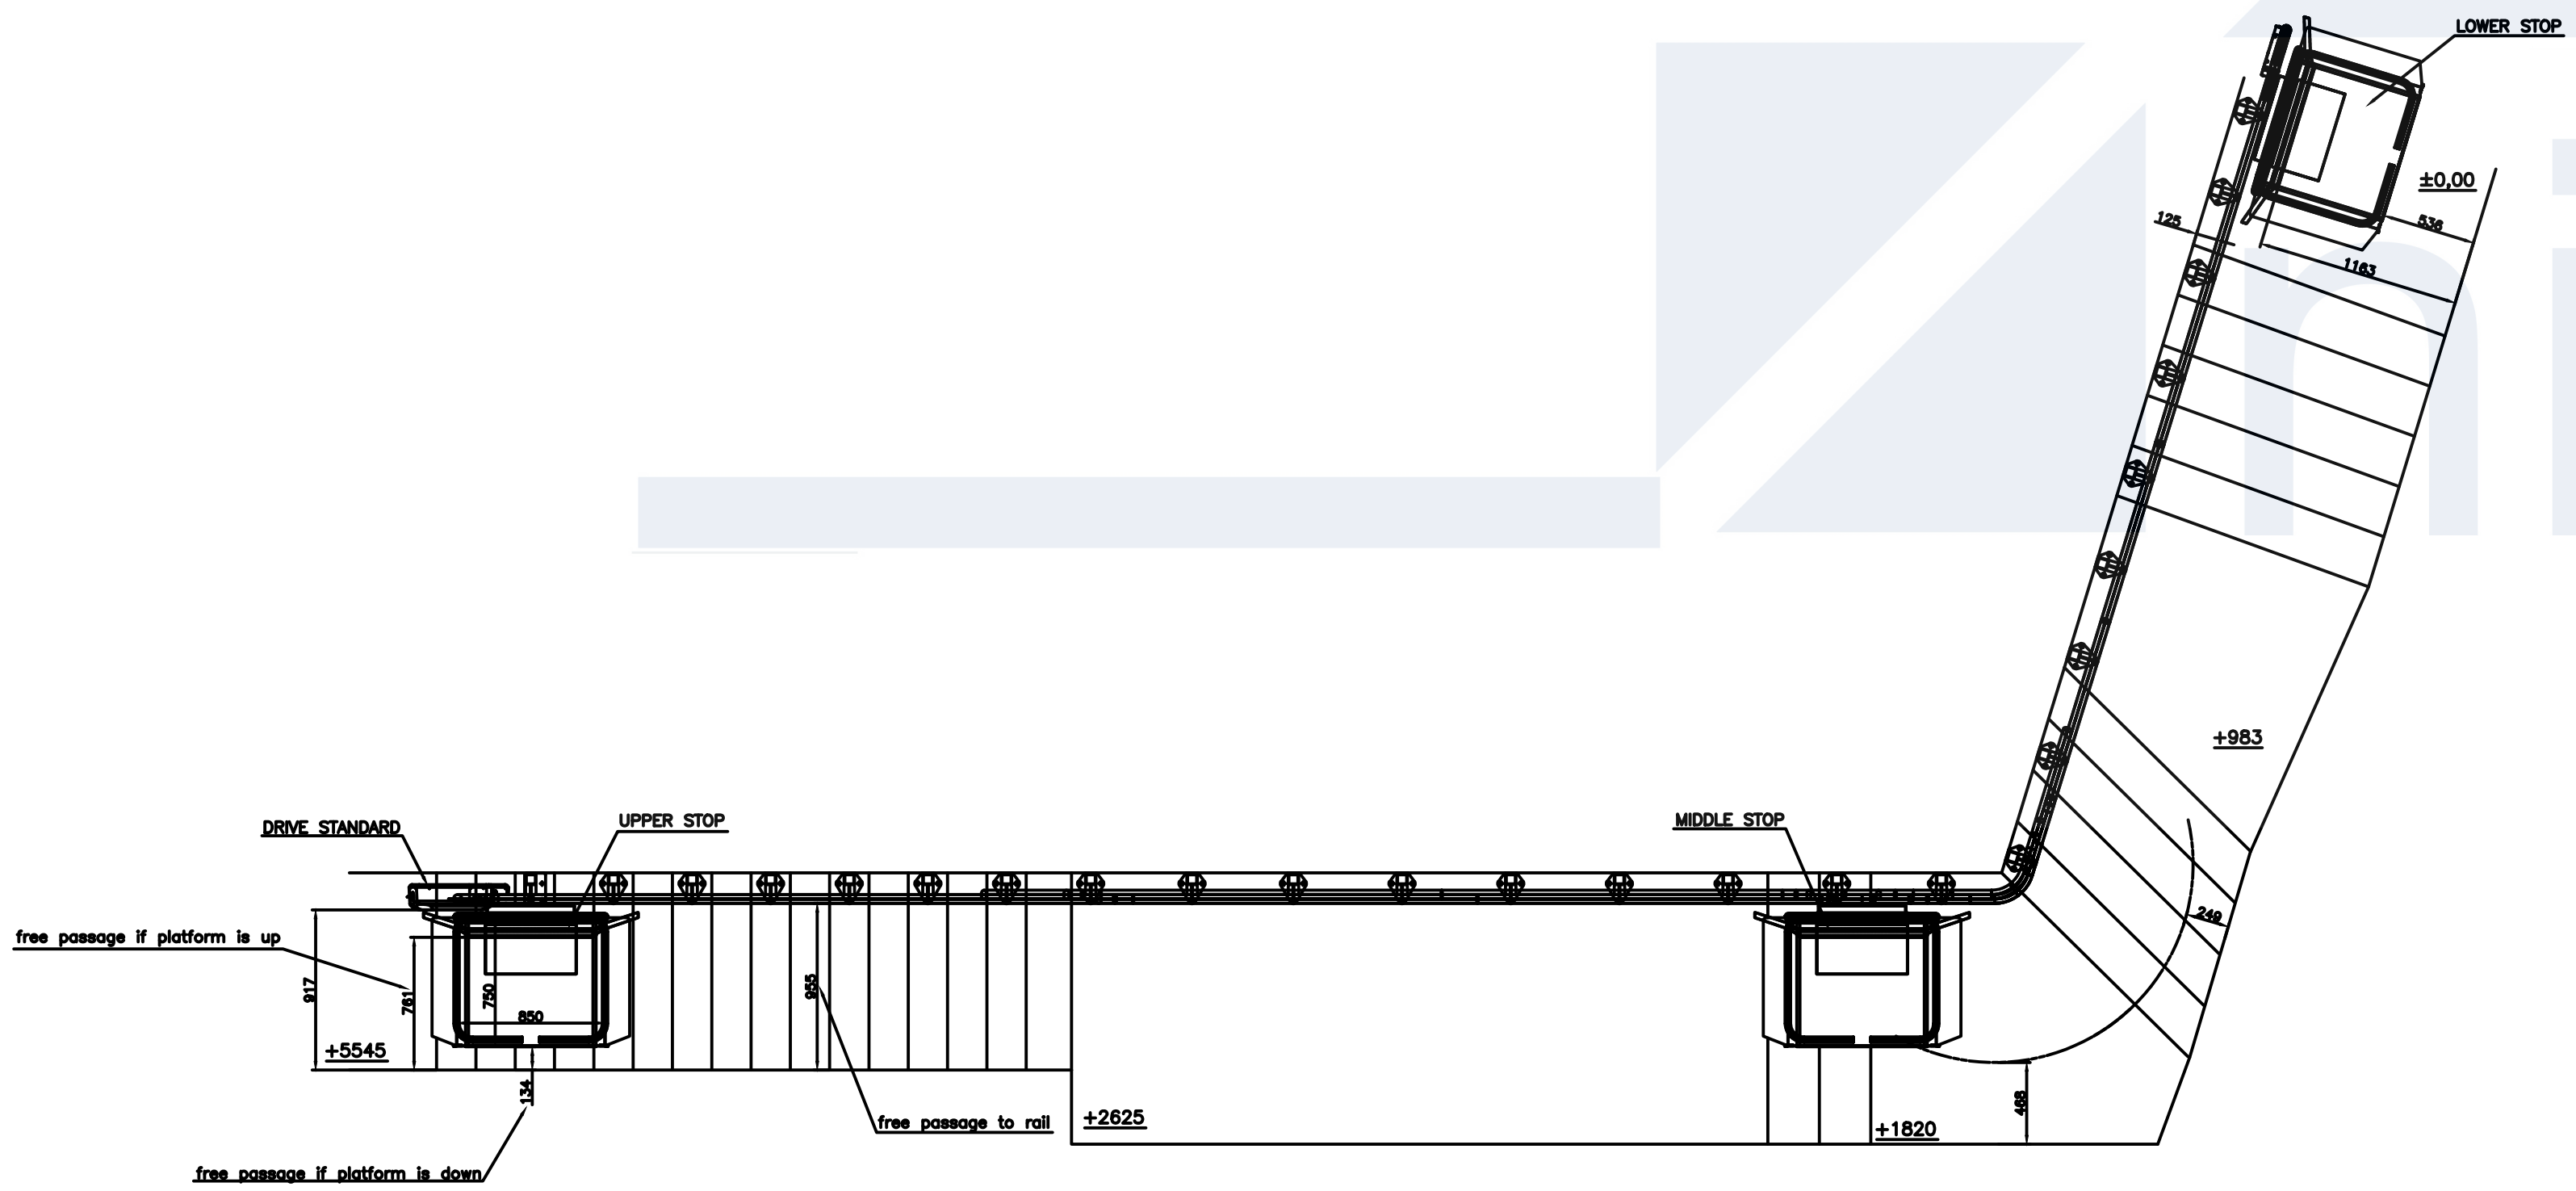
LOWER STOP
±0,00
+983
DRIVE STANDARD
UPPER STOP
MIDDLE STOP
free passage if platform is up
+5545
free passage to rail
+2625
+1820
free passage if platform is down

nival s.l.